

Owner's manual and technician setting




TRC

DIGITAL WALL PANEL WITH TOUCH DISPLAY

Index


1. Owner's Manual	3
Quick Manual.....	3
1.1 Turning the unit ON or OFF.....	4
1.2 Adjusting the set-point temperature	4
1.3 Switching between System modes.....	5
1.4 Switching between Fan speeds	5
1.5 Switching Fan on demand ON or OFF	5
1.6 Faults	6
1.7 Switching between temperature scales.....	6
 2. Installation Instructions.....	 7
 3. Wiring Diagram	 10
 4. DIP Switch settings	 10
Switch 1 – Temperature readings from CTU or from panel	10
 5. Technician Settings	 11
P1 – Temperature readings offset	12
P2 – Enable/Disable screen dimming.....	12
P3 – Screen dimming time delay	13
P4 – Dimming percentage value	14
P5 – Display brightness	15
P6 – Show/Hide lighting button (CTU model dependent)	16
P7 – Enable/Disable the beeper	15
Exit technician settings and return to normal display.....	15

1. Owner's Manual

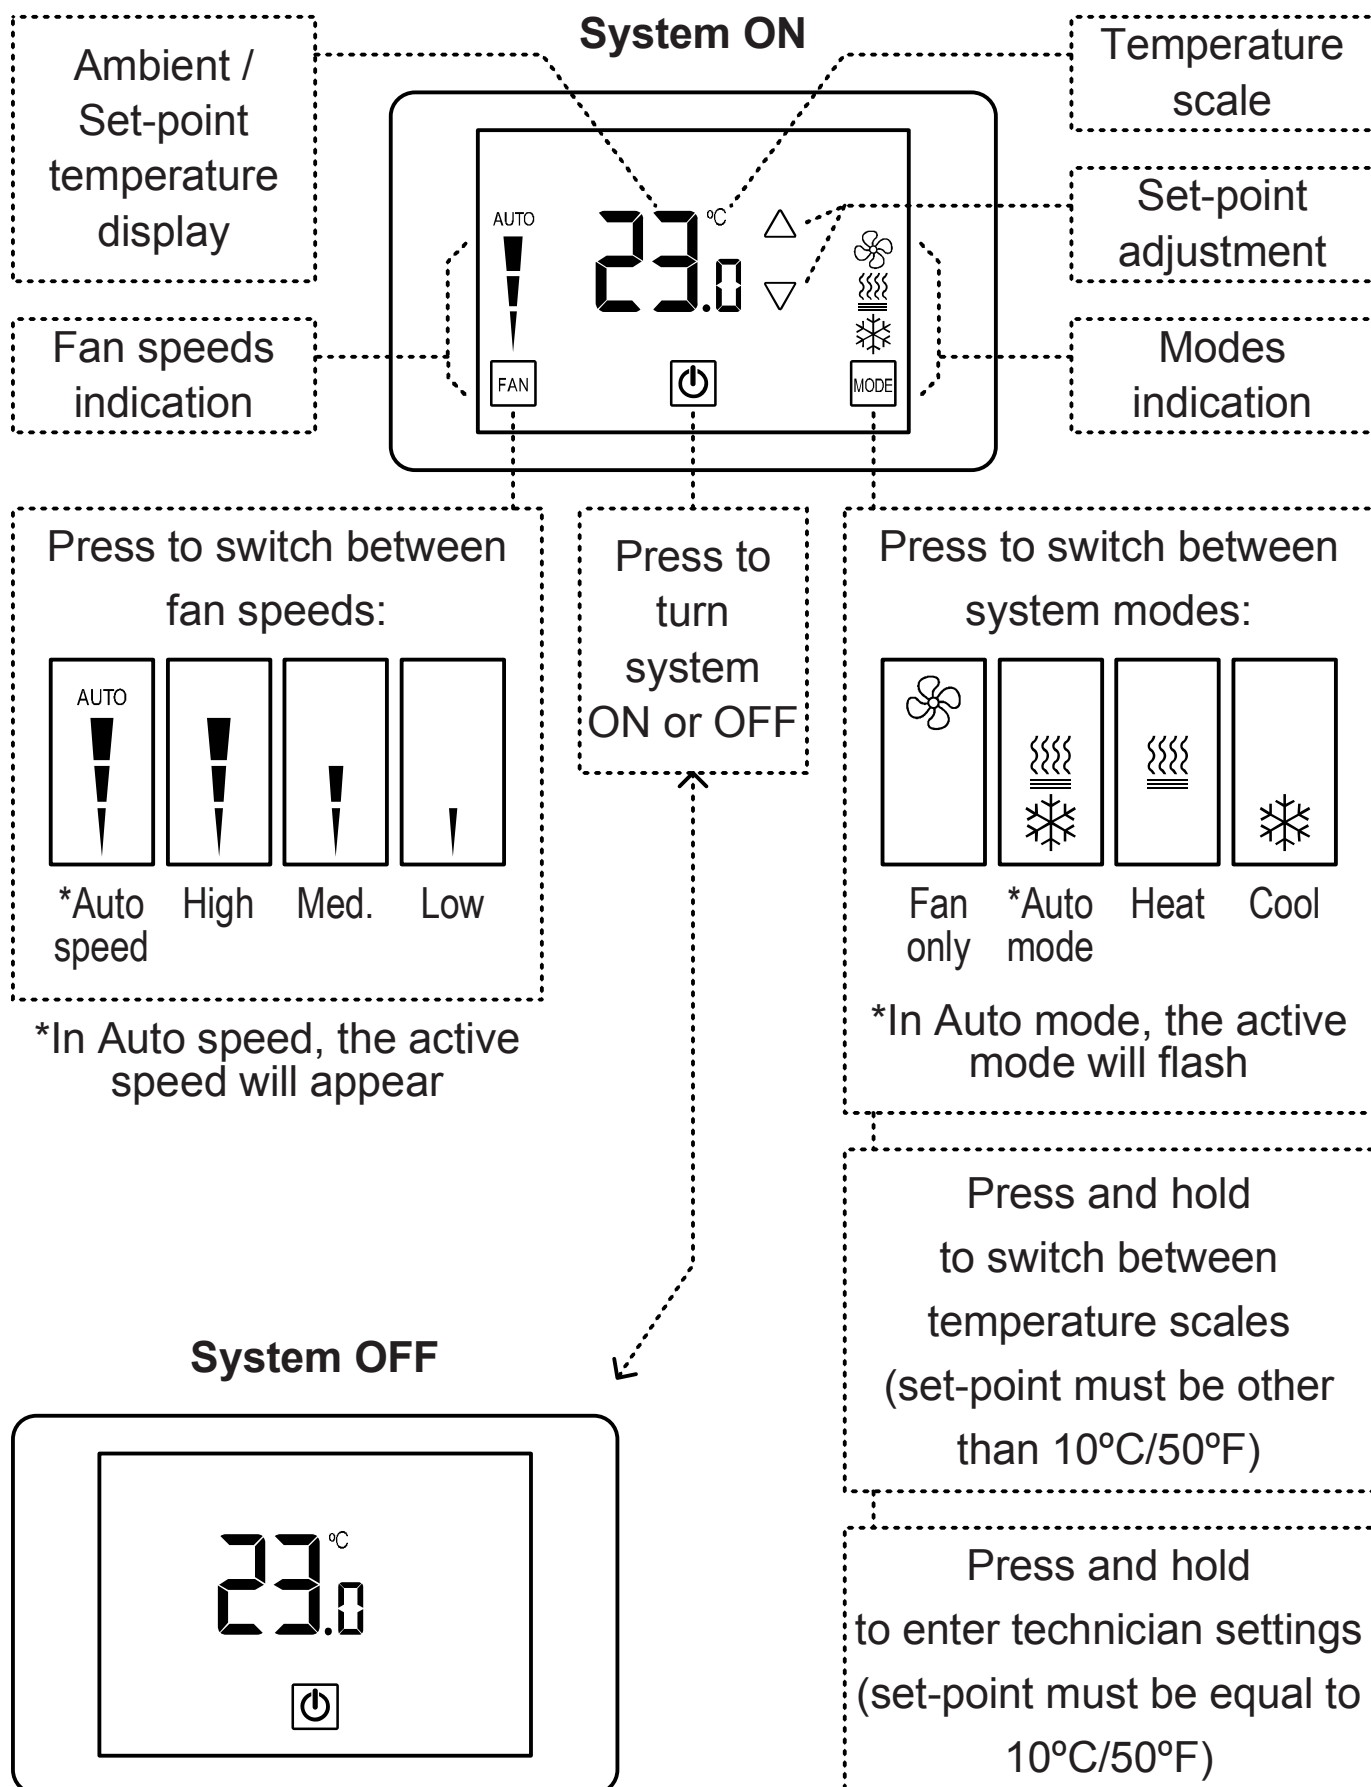


1.1 Turning the unit ON or OFF

- Press the  button to turn the unit ON – system mode and fan speed symbols will appear on display.
- Press again to turn the unit OFF – the symbols will disappear.

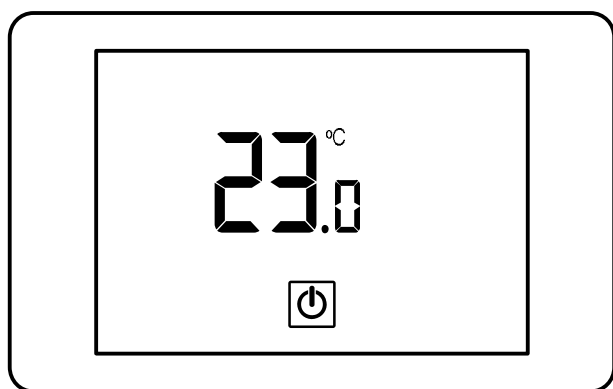

Unit OFF

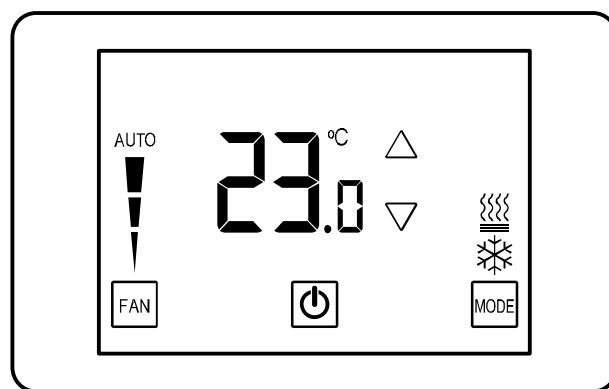


Unit ON

1.2 Adjusting the set-point temperature

- While the thermostat is ON, press the  or  buttons – the set-point temperature will flash.
- Press again to adjust the set point.

1.3 Switching between system modes

- Press the  button to switch between system modes:

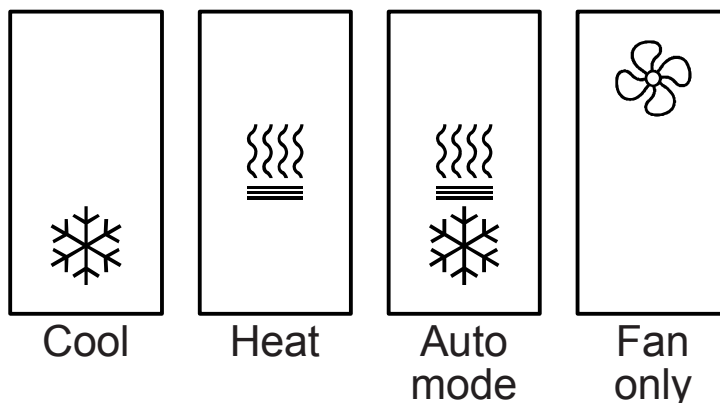

Notes:


- During demand for cooling (cooling active), the  will flash.
- During demand for heating (heating active), the  will flash.

The selection of system modes may be disabled depending on configuration of the CTU main board connected to the panel.

1.4 Switching between fan speeds

- Press the  button to switch between fan speeds:

Note: When Auto speed is selected, the word “AUTO” and the active fan speed will appear on display

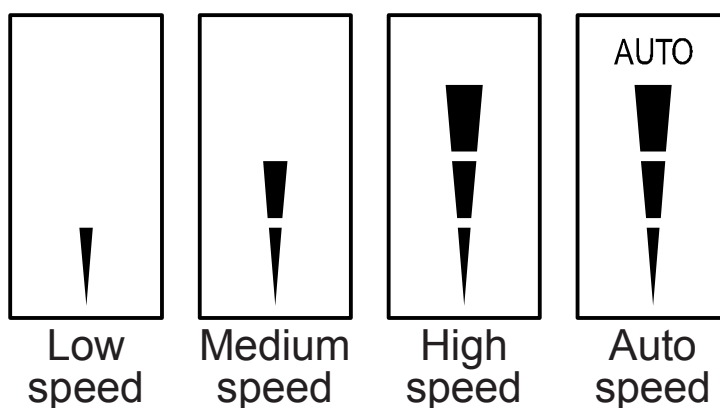

The selection of fan speeds may be disabled depending on the configuration of the CTU main board connected to the panel.

1.5 Fan on demand (Auto fan)

- Press and hold the  button to activate or deactivate fan on demand (Auto fan) function.

Notes:

- When activated, the fan will run with demand for cooling or heating.
- The fan on demand function cannot be activated with “Fan only” mode.



This option may be disabled, depending on the type of the CTU main board connected to the panel.

1.6 Faults

F8 – Communication fault with the CTU main board

Check wiring connection between the CTU and the room panel and verify the DIP Switches configuration.

1.7 Switching between temperature scales

- Press and hold the  button for 5 seconds to switch between temperature scales.

2. Installation Instructions

The digital wall panel with touch display is designed for flush mounting in the room to be controlled. It should be located where the occupant can easily read the display and use the controls.

If the built in temperature sensor is being used to measure room temperature, the panel should be placed where the temperature is representative of the general room conditions, away from cold or warm air draughts, radiant heat and direct sunlight.

The panel should not be installed on an outside wall.

- The standard installation height is 1.5 meter (5 feet) from the floor.



WARNING: Risk of Electric Shock and Property Damage.

Disconnect power supply before making electrical connections.

The installation is to be performed by a qualified electrician.









WARNING: The integrated circuits in the controller are sensitive to static currents. Take suitable precautions.

2. Installation Instructions (cont')


Installation procedure:

1. Separate the front display from the back plastic cover by inserting a small flat screwdriver into each of the three slots as shown in the picture and rotating it gently.
2. Remove the front display and keep it in a safe place.
3. Connect the wires as shown in the enclosed wiring diagram. All terminals accept 1x0.5mm²/24 AWG.
4. If necessary, make changes to the DIP switches position as explained in this manual.
5. Place the thermostat in the electrical box and tighten up the 2 screws (Gewiss Box - GW 24 203).
6. Adapt the front frame-panel into its place, by pushing it towards the wall.


2. Installation Instructions (cont')

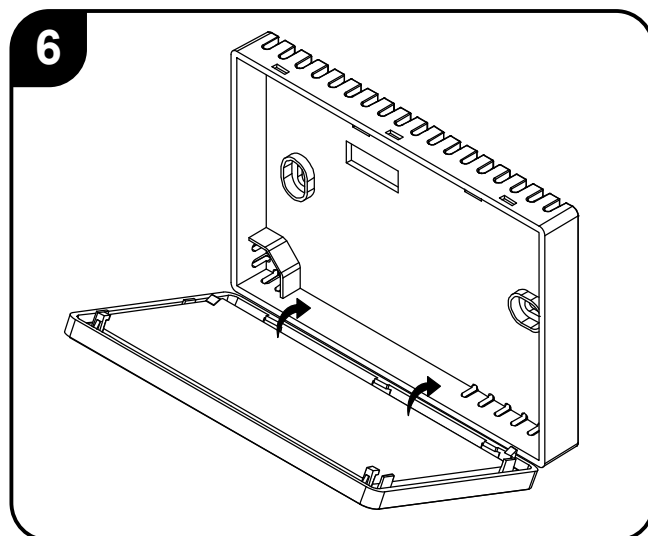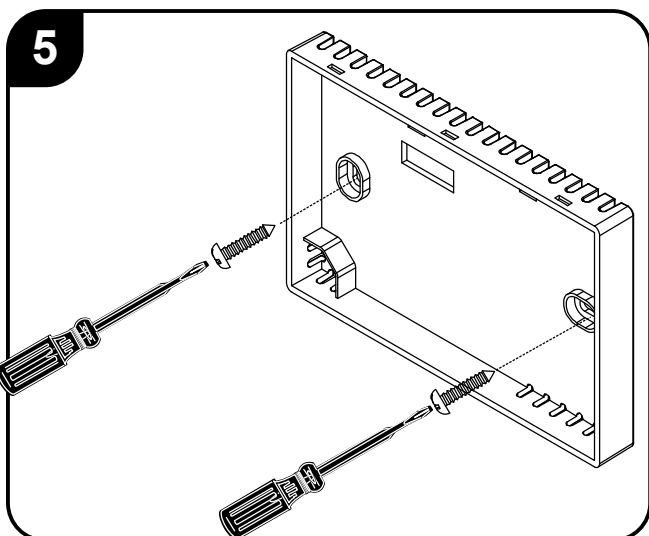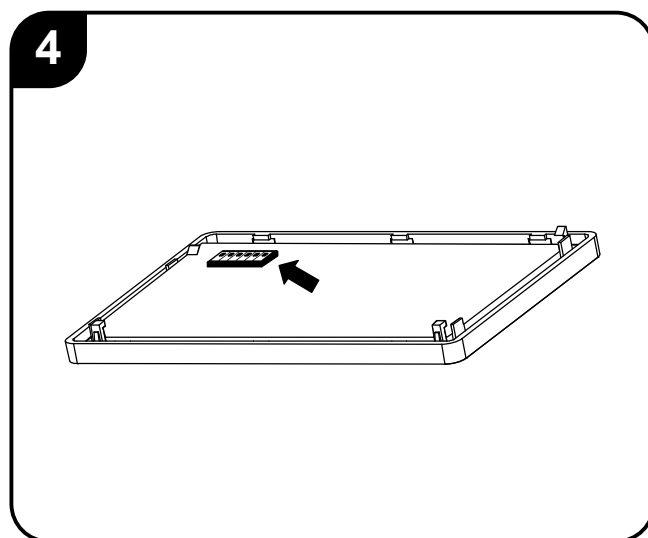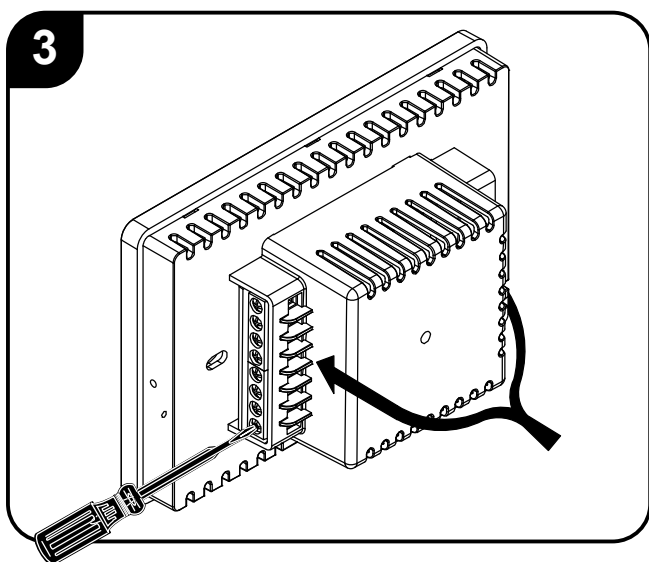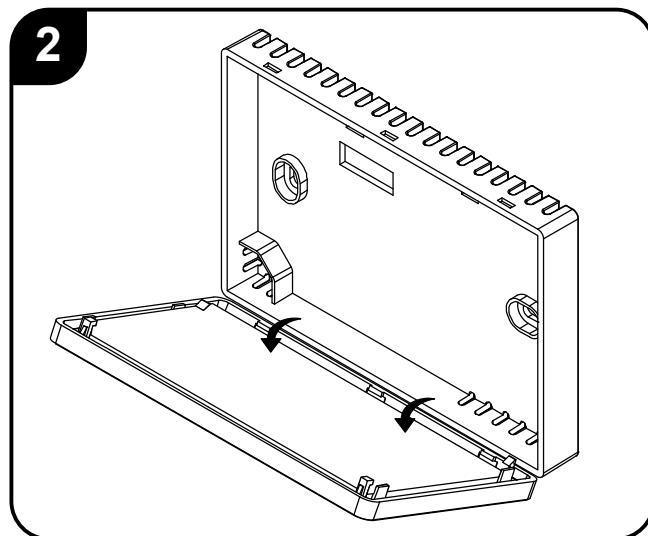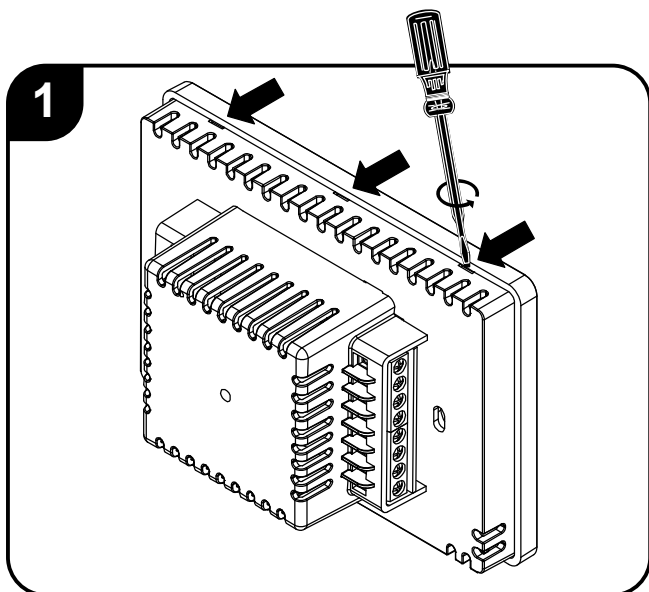


3. Wiring diagram

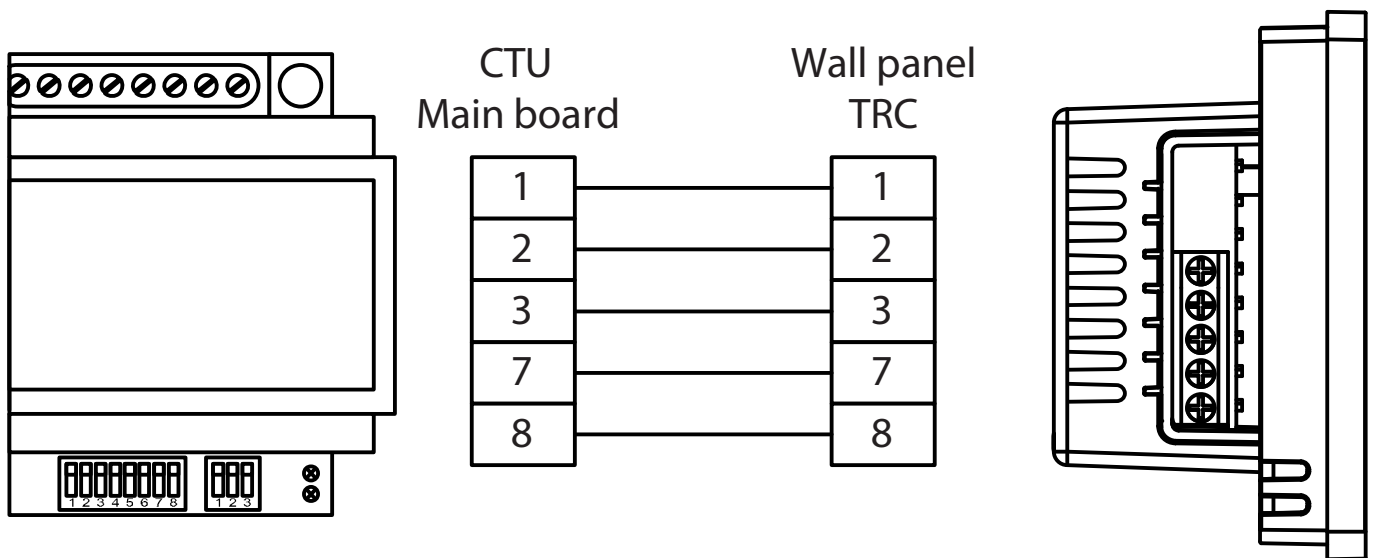


4. DIP Switch settings

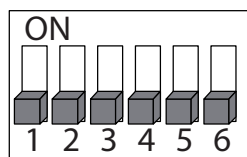


***Default**

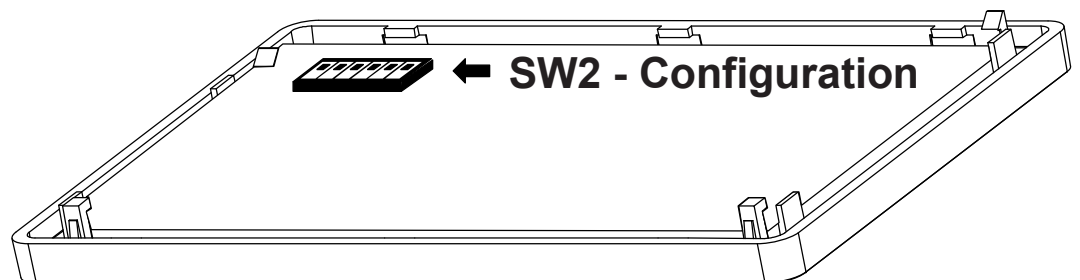

Switch 1 – Temperature readings from CTU or from wall panel

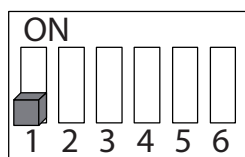

Switch OFF
Readings from
wall panel
(default)

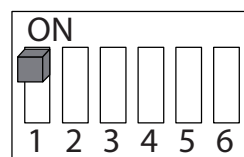

Switch ON
Readings from
CTU

Switch 2 – Always OFF

Switch 3 – Always OFF

Switch 4 – Always OFF



Switch 5 – Always OFF

Switch 6 – Always OFF

5. Technician Settings

Enter technician settings

- Adjust the set-point temperature to 10°C – the button  will appear on display.
- To enter technician settings, press and hold the  button for 5 seconds.
- Use the  button to advance to the next parameter.
- Use the  button to return to return to the previous parameter.
- Press the  button or wait 60 seconds to exit technician settings and return to normal display.

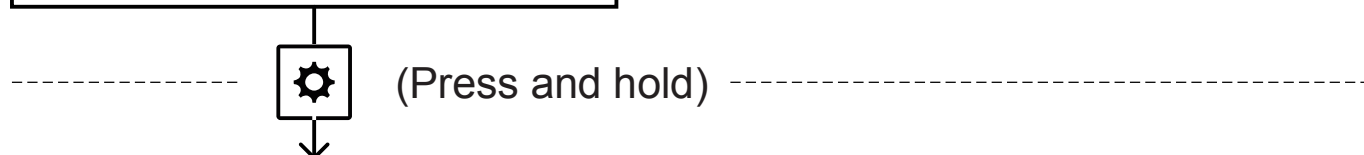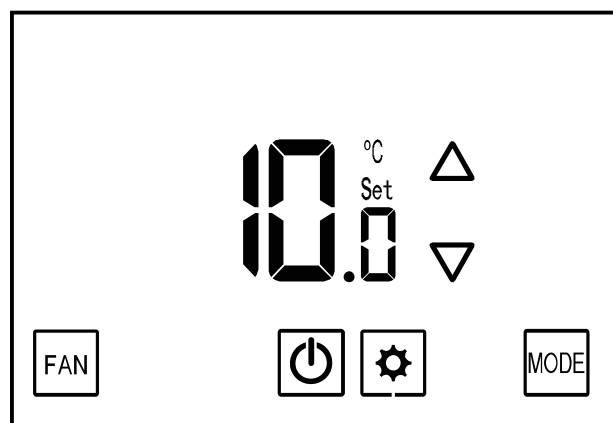

5. Technician settings (cont')


P1 Temperature readings calibration offset

- Use the ▽ and △ buttons to adjust the offset
- Range: -6°C...+6°C, default 0°C

P2 Enable/Disable screen dimming

- Using the ▽ and △ buttons, select between:
00 – Disable screen dimming
01 – Enable dimming (default)


If no key is pressed, during
the time set in parameter P3,
the display will dim

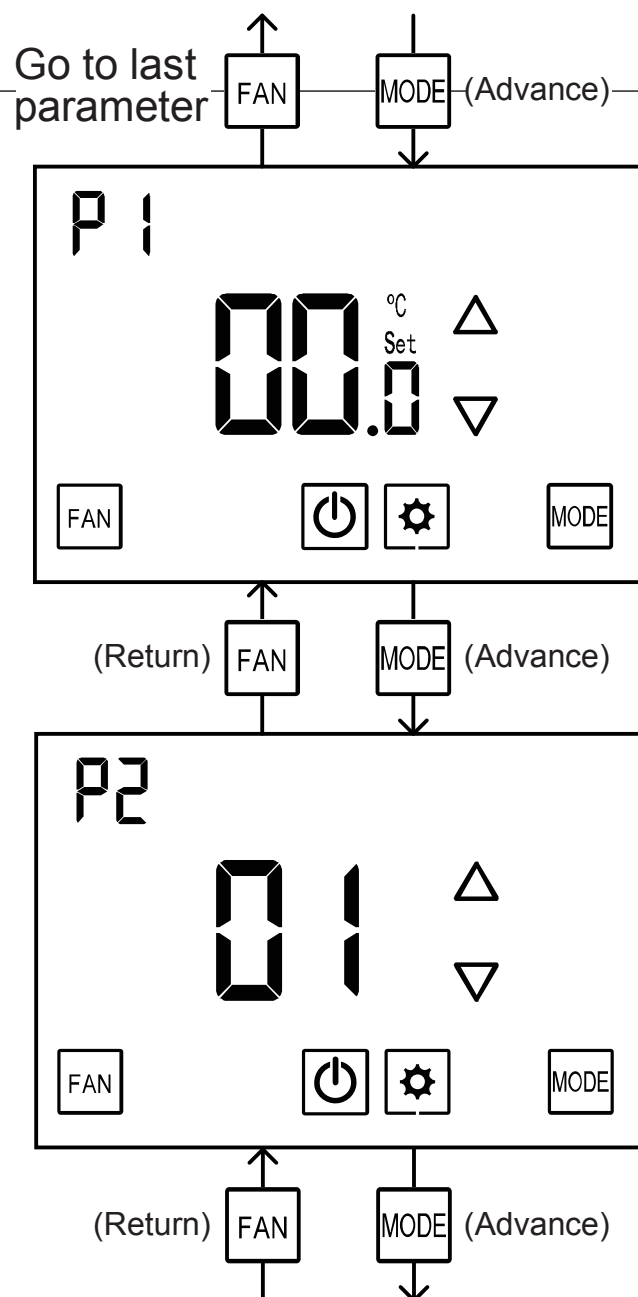

5. Technician settings (cont')


P3 Screen dimming time delay

- Using the ▽ and △ buttons, adjust the time delay before the screen will dim
- Range: 0...99 sec., default: 5 sec.

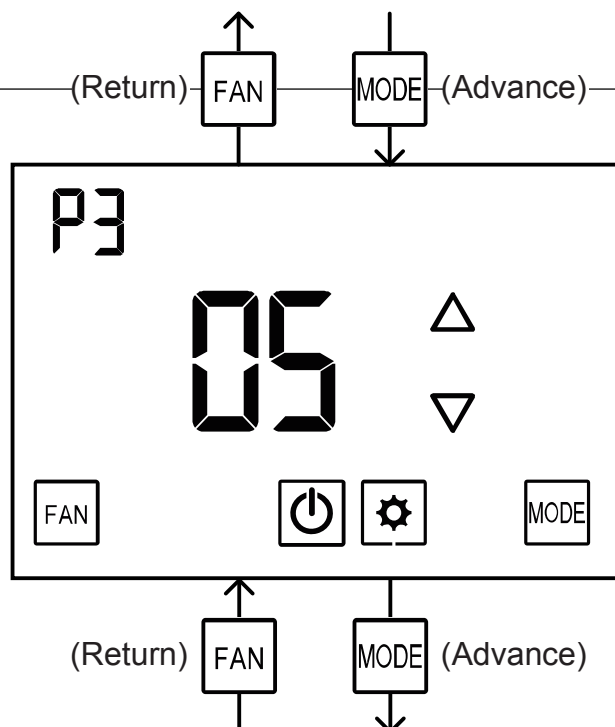

P4 Dimming percentage value


- Using the ▽ and △ buttons, adjust the dimming percentage value
- Range: 10...90%, default: 10%

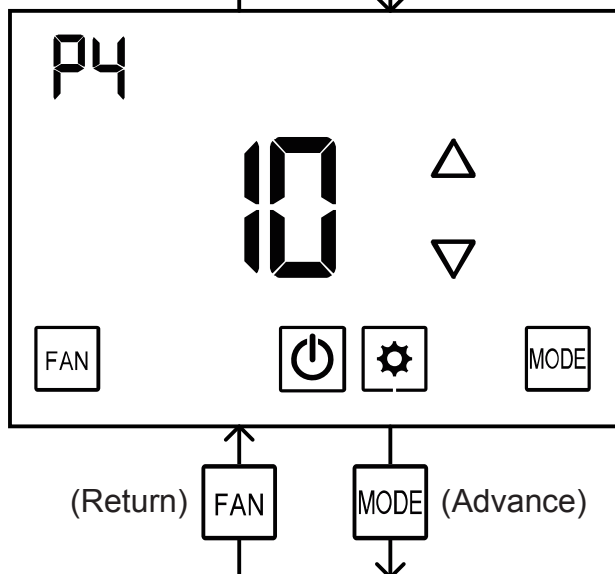

5. Technician settings (cont')


P5 Display brightness

- Using the ▽ and △ buttons, adjust the time display brightness
- Range: 50...100%, default: 100%

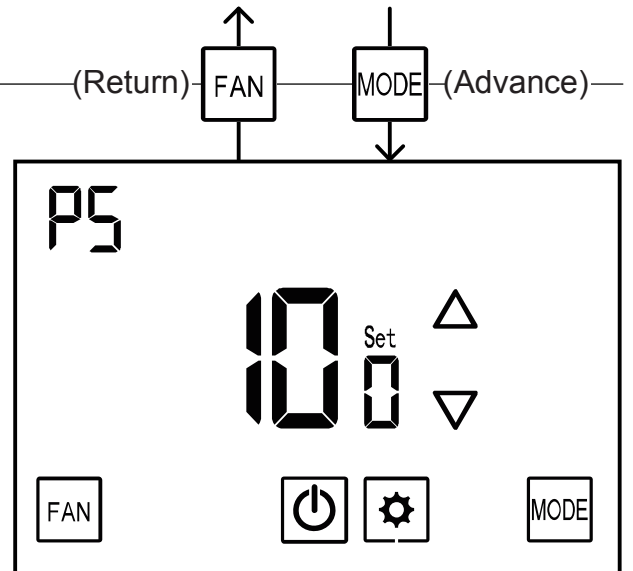

P6 Show/Hide lighting button

- Using the ▽ and △ buttons, select between:
 - 0 – Hide the lighting button
 - 1 – Show the lighting button (default)

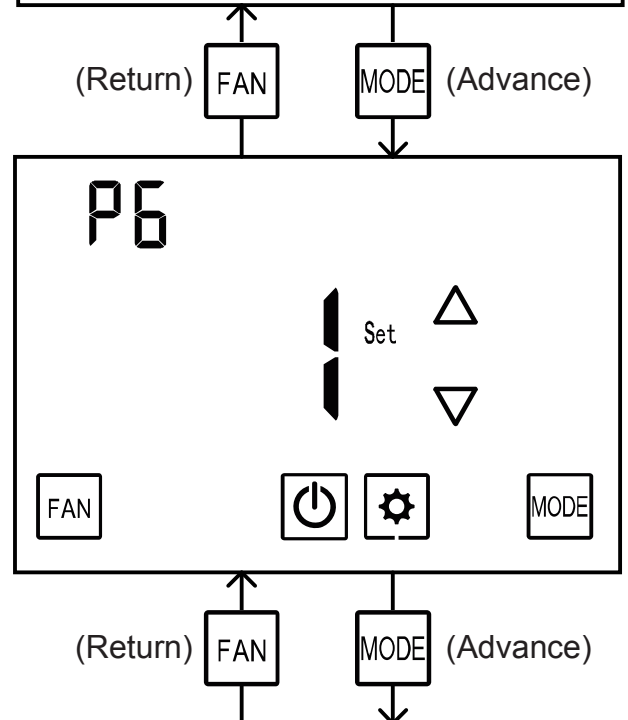


Note: the lighting button will only be available with some CTU types. It will never appear on display when the CTU does not support the lighting feature

5. Technician settings (cont')

P7 Enable/Disable the beeper

- Using the ▽ and △ buttons, select between:
 - 0 – Disable the beeper
 - 1 – Make the panel beep whenever a button is pressed

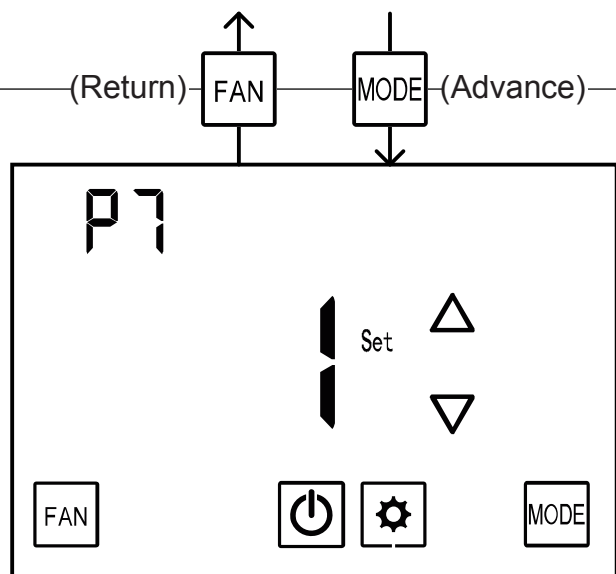

Press the **MODE** button to return to parameter P1.

Press the **⏻** button or wait 60 seconds to exit technician settings mode and return to normal display.

Important! Reset the set-point temperature to the desired value

Series		TRC	
Issue	09.25	Supersedes	---

The data indicated in this manual is purely indicative.
The manufacturer reserves the right to modify the data whenever it is considered necessary.