


COMPONENTI FORNITI

- 1 n. 1 Valvola a 3 vie con 4 attacchi (3/4" M - 3/4" M)
 - 2 n. 1 Servocomando (rif. al mod. di valvola ordinata, ON/OFF, modulante, ecc.)
 - 3 n. 1 Nipples filettato (1/2" M - 1/2" M)
 - 4 n. 3 Guarnizioni (1/2")
 - 5 n. 1 Tubo rame ad "S", ø 14 mm (1/2" F - 3/4" F)
 - 6 n. 1 Tubo rame dritto, ø 14 mm (1/2" M - 3/4" F)
 - 7 n. 4 Guarnizioni (3/4")
 - 8 n. 2 Tubi rame 90°, ø 14 mm (1/2" F - 3/4" F)
 - 9 n. 2 Valvole a sfera (1/2" M - 1/2" F)
 - 10 n. 2 Morsetti "Mamut" + 1 vite
- / Imballo dell'accessorio e la presente Istruzione di montaggio
M = attacco Gas Maschio; F = attacco Gas Femmina

SUPPLIED ITEMS

- 1 No. 1 3-way valve with 4 connections (3/4" M - 3/4" M)
 - 2 No. 1 Actuator (refer to the mod. valve ordered, ON/OFF, modulating, etc.)
 - 3 No. 1 Thread nipple (1/2" M - 1/2" M)
 - 4 No. 3 Sealings (1/2")
 - 5 No. 1 "S" copper pipe, ø 14 mm (1/2" F - 3/4" F)
 - 6 No. 1 Straight copper pipe, ø 14 mm (1/2" M - 3/4" F)
 - 7 No. 4 Sealings (3/4")
 - 8 No. 2 90° copper pipes, ø 14 mm (1/2" F - 3/4" F)
 - 9 No. 2 Shut-off (ball) valves (1/2" M - 1/2" F)
 - 10 No. 2 "Mammoth" terminals + 1 screw
- / Packaging of the accessory and hereby Assembly instruction
M = Male Gas connection; F = Female Gas connection

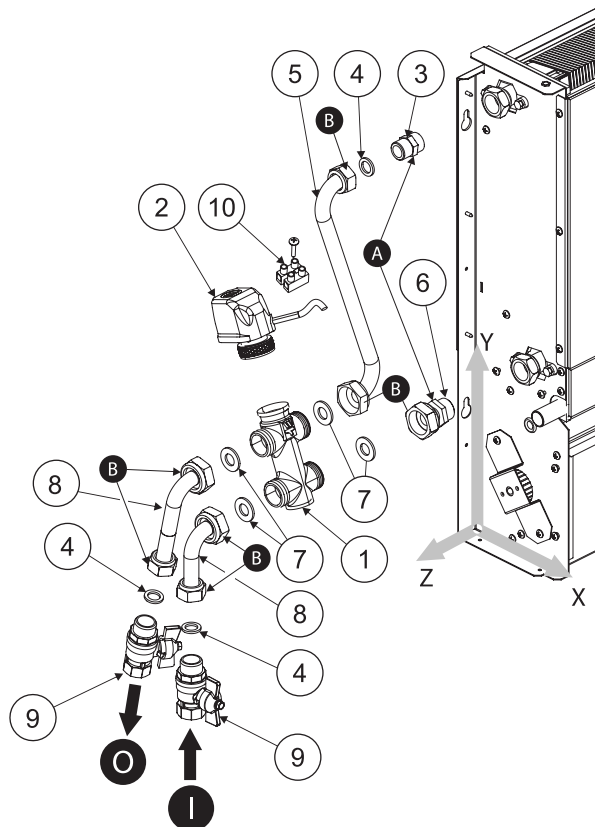

Posizione attacchi idraulici (ad installazione ultimata)
Water connections position (when the installation is finished)

Pressione di esercizio - Working pressure
MAX 15 BAR

Coppia di Serraggio/Tightening torque	MIN	MAX
A	Nm 3	5
B	Nm 8	12

Questo foglio istruzioni è parte integrante del libretto dell'unità sulla quale viene installato l'accessorio. A tale documento si rimanda per le AVVERTENZE GENERALI.

NOTA: A fine lavori, collegare i cavi elettrici della valvola come indicato nello schema elettrico dello specifico pannello comando installato (riferirsi alle istruzioni e schemi elettrici del pannello comando).

Qualora non sia disponibile lo schema elettrico necessario per uno specifico impianto (o per un particolare sistema di regolazione), ricordiamo che siamo sempre disponibili a realizzare ulteriori nuovi schemi elettrici in accordo alle esigenze e richieste dei nostri clienti. Per ulteriori informazioni rivolgersi al nostro ufficio tecnico che rimane a disposizione per qualsiasi chiarimento e per la progettazione di soluzioni personalizzate.



Riferimento - Reference		I = IN	O = OUT
X	mm	80	30
Y	mm	96	111
Z	mm	124	124
Attacchi - Connections	ø (*)	1/2" F	1/2" F
Perdita di carico valvola Valve pressure drop	Kvs	14,6 + 2,5 + 14,6	

Hereby instruction sheet is an integral part of the unit's manual on which the accessory is installed. Please refer to hereby manual for GENERAL RECOMMENDATIONS.

NOTE: When the work is finished, connect the valve electrical wires as indicated on wiring diagram of the specific installed control panel (please refer to instructions and electrical diagrams of the control panel).

May a wiring diagram for a specific installation not be available in the present listing (or for a special particular need), we would like to remind you that it can be realised according with your special needs.

For further information make reference to our Technical department, which is available for explanations and for the design of customised solutions.

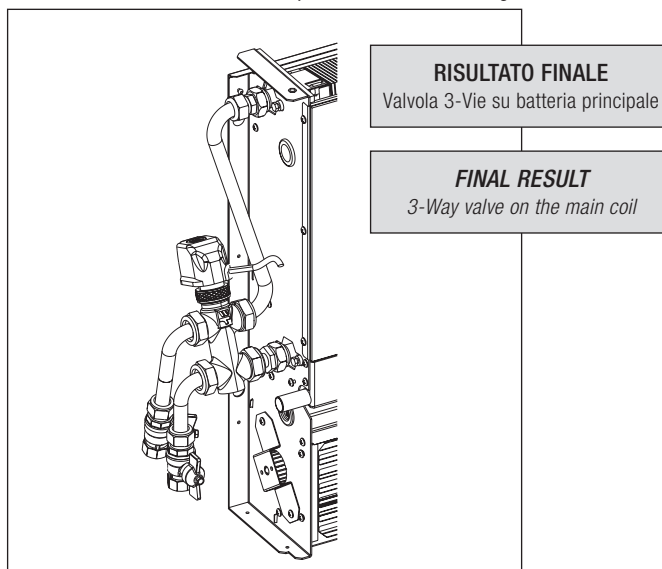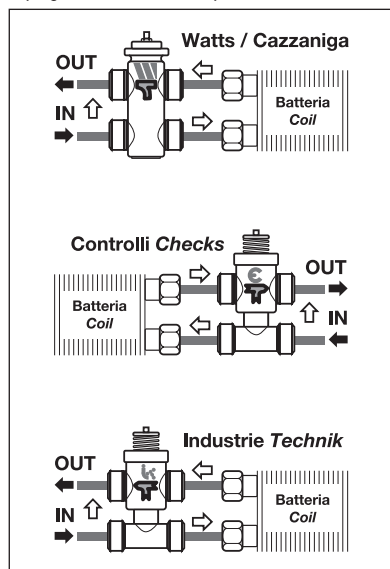

Serie / Series		V25 / V25M
Emissione / Issue	06.25	Sostituisce / Supersedes ---
Catalogo / Catalogue	CLM 240.33	